


FUN SPINNER

DC Version

Instruction Manual

Model #7748

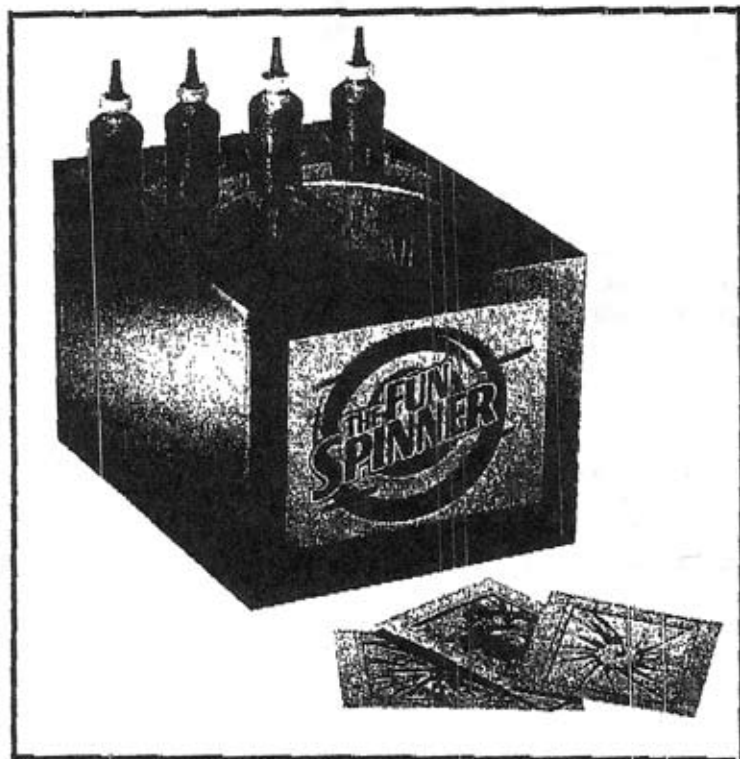

 **GOLD MEDAL®**

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

www.gmpopcorn.com

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

On the rear panel near the power cord is the main power **ON/OFF** switch. A second switch is activated when the lid is in the down position. During normal operation, the main power switch should be in the **ON** position. Opening and closing the lid will start or stop the paper tray spinning. **CAUTION!** - Remember to turn the main power switch to **OFF** before unplugging the machine.

CREATING ARTWORK

Before turning the main power switch **ON**, place one of the corrugated liners, **Item #7737** (not included), around the inside of the bowl. This will absorb most of the excess paint and minimize clean up at the end of the day. If paint build-up on the liner becomes excessive, turn the machine power switch to **OFF** and replace the liner.

The artwork may be created in one of two ways.

First Method: Place the 5 x 7 card stock, **item #7739** (not included), in the paper tray being sure the edges of the paper are within the tray edges. Squeeze small drops or lines of paint (see Gold Medal Products for ordering paint) onto the card stock. Multiple colors of paint may be used and are recommended for the best pictures. Close lid of the machine to start the tray spinning. Raise the lid after a few seconds to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

Second Method: Place the 5 x 7 card stock, **item #7739** (not included), in the paper tray being sure the edges of the paper are within the tray edges. Close the lid of the machine to start the tray spinning. Squeeze a few drops of paint (see Gold Medal Products for ordering paint) through the slot in the lid onto the card stock. Multiple colors of paint are recommended for the best pictures. Raise the lid to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

Optional Accessories: Item #7745 – Flying Disc Holder
#7747 – Fun Spinner Base



WARNING

Never attempt to remove the artwork while the card tray is still spinning to avoid personal injury. Overriding the door safety switch and motor brake mechanism can result in serious injury.