



Mini Machine

User Manual



Creative Concepts, Inc.
1500 Georgia Road
Ironton, Alabama 35210

Phone: 205-838-0570
Fax: 205-838-0999
Toll Free: 866-838-0570

Publication Version. 1.0
Mini Machine 06-25-07

Pucker Powder ®

From the Staff of Creative Concepts:

Thank you for your recent purchase of our **Mini Pucker Powder Machine**. Our company is constantly evolving and working to make our products simpler and more marketable for you our customer. It is your suggestions and recommendations that have molded our business to where it is today. Customer care is critical to our operation and we therefore hope that you will contact us with any comments or concerns. All of us at Creative Concepts look forward to a long and prosperous business relationship with you. Please call our toll free line at 866-838-0570 with any questions or comments.

1. **Storage:** Storage should be in a cool, dry area (55-68 Degrees Fahrenheit at approximately 50% relative humidity).
2. **Shelf Life:** 2 years when stored in the above mentioned conditions.
3. **Do not get candy wet.**
4. **Allergen Statement:** Our current formulas (and processing equipment) for Pucker Powder are free of the main allergens and any derivatives. This allergen list includes peanuts, tree nuts, dairy, egg, wheat, fish, and shellfish. Additionally, the processing and packaging of peanuts and tree nuts are done in a separate room from the other items.

Covered by Patents: US D476,855 S , 6,619,510, Additional Patents Pending.



Table Use Instructions

(also mounted to back of machine):




TABLE CLAMP INSTRUCTIONS



1. Carefully Place Machine on its back

Patents Pending

Toll Free
(866)-838-0570

2. Identify:

Rod

Large **Notch** (in slot)

Slot

Pin (in Rod)




3. Return Machine to Upright position

4. Pull **Rods** out to either position **A** or **B** (depending on table, ie. wood or plastic):


Position A. Wood Top (1" thin)

Pull **Rod** out until **Pin** contacts **End of Slot**

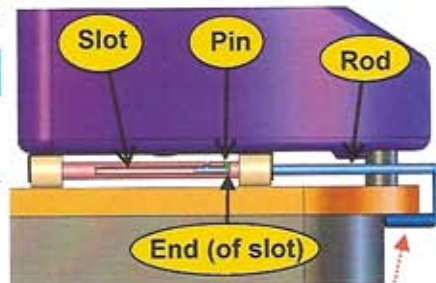

Position B. Plastic Top Table (2"-2 3/8" thick)

Pull **Rod** out until **Pin** can be rotated into **Notch** (Rod will rotate 90 degrees and fit over thick table edge)

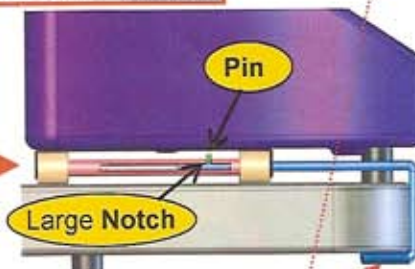

5. Locate Machine on edge of table so that the **Rods** are contacting as shown.



Candy Loading Instructions:



Step 1: Push wire toward rear of the machine releasing the mechanism bottom



Step 2: Pull down on mechanism bottom, removing it from the machine



Step 3: Remove packaging from candy bottle, unroll flexible tube. DO NOT remove tube from bottle



Step 4: If tube hasn't fully expanded, gently squeeze the sides of the compressed area to return tube to full cylindrical state.



Step 5: Insert assist straw completely into unrolled flexible tube until nearly touching the candy



Step 6: Push and hold the yellow PUSH button, slide mechanism bottom on to candy bottle making sure the flexible tube slides all the way out the small opening in the Mech Bottom

Once candy bottle is securely in place PUSH the yellow button once again and remove the Assist Straw for use in the next flavor



Candy Loading Instructions pg 2:



Step 7 :Insert mechanism bottom with candy bottle into mechanism housing. Push Mechanism Bottom completely up until it stops. Do not push yellow PUSH button while reattaching.



Step 8 : Making sure that Mechanism Bottom w/Candy bottle is completely up into mechanism housing, reverse step 1 by pulling wire forward until it locks the mechanism bottom into place.

Step 9 : Fill all 4 remaining flavors and then Pucker away!!!

